



Klipspringer


Compliance with confidence

Moisture meter

Operating Manual

RH2 water activity measuring chamber

for determining the water activity of food




Your humimeter RH2 at a glance

The main unit



No.	Name
1	Connector for external sensor
2	USB port (optional)
3	Display
4	Keypad
5	Rubber protection cover

Rear of the main unit

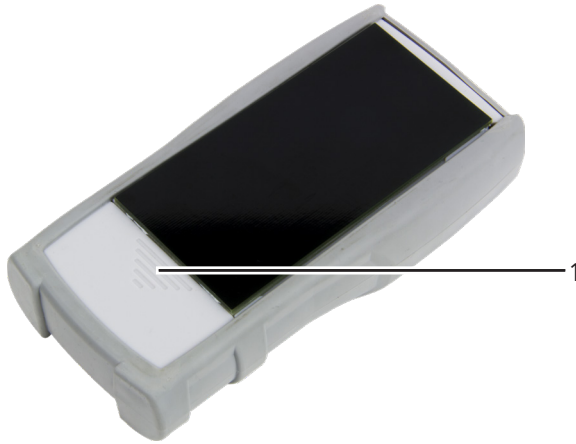

No.	Name
1	Battery compartment

The water activity measuring chamber



No.	Name
1	Screw-top jar
2	Protective grid





















Measurement	Measuring range	Resolution	Accuracy
aw value	0 to 1	0.001 aw	
calibration:	0.00 to 0.98		see "15.2 Technical data"
temperature °C	0 °C to +50 °C	0.1 °C	+/- 0.5 °C (at 25 °C)
temperature °F	32 °F to 122 °F	0.2 °F	+/- 0.5 °F (at 77 °F)

The display



No.	Name
1	Product type
2	Water activity (see "7.1 Definition product types")
3	Display symbols
4	Temperature display


The display symbols

Symbol	Name	Symbol	Name
	Enter		No
	Up		Change input level
	Down		OK
	Back		Change menu
	Enter numbers		Enter data
	Enter letters		View measurements
	Continue / go right		Delete measurements
	Left		On/off button, display light
	Yes		Save measured value
	Auto save		Hold function

The menus


The device has three different menus: product selection, Data Log and main menu:

Product selection menu

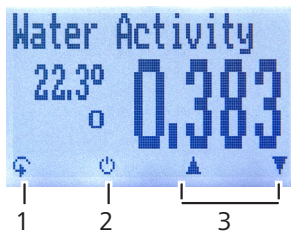

No.	Name
1	Change menu
2	Display illumination / device on/off
3	For changing the product type

Data Log menu

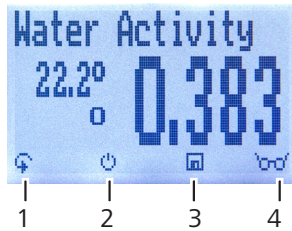

No.	Name
1	Change menu
2	Display illumination / device on/off
3	Save measured value
4	Show the last recorded values

Main menu

The main menu comprises the following menu items:

- **Edit Logs:**
Manual Logs, Auto Logs, Clear Logs
- **Print Logs:**
Last Log, All Logs, Clear Logs
- **Send Logs:**
Manual Logs, Auto Logs, Clear Logs
- **Options:**
Bluetooth, Date/Time, Log Time, Emission ratio, Language, Unlock, °C/°F, BL On Time, Auto Off Time, Calibrate, Materialcalib., Online Send, Password, Reset
- **Status**

Table of contents

Your humimeter RH2 at a glance	2
The main unit	2
Rear of the main unit	3
The water activity measuring chamber	4
The display	4
The display symbols	5
The menus	5
1. Introduction	11
1.1 Information about this operating manual	11
1.2 Limitation of liability	11
1.3 Symbols used in this manual	12
1.4 Customer service	12
2. For your safety	13
2.1 Proper use	13
2.2 Improper use	13
2.3 User qualifications	13
2.4 General safety information	14
2.5 Warranty	14
3. On receipt of your device	15
3.1 Taking the device out of its packaging	15
3.2 Making sure that all of the components have been included	15
3.2.1 Scope of supply	15
3.3 Inserting batteries	16
4. Using the device - Basics	16
4.1 Switching on the device	16
4.2 Selecting the product type	17
4.3 Exchanging the sensors	17

4.4	Taking a measurement	17
4.5	Switching the device off	17
5.	The measuring process	18
5.1	Preparing a measurement	18
5.2	Taking a measurement	18
5.3	Adjustment behaviour of the sensor	20
6.	Saving your readings	21
6.1	Hold function - Freezing the displayed values	21
6.1.1	Activating the Hold function in the Options menu	21
6.1.2	Using the Hold function	21
6.2	Saving your readings manually	22
6.2.1	Saving individual readings	22
6.2.2	Saving several readings (a measurement series) at the same time	24
6.3	Auto save function (time-based)	25
6.3.1	Activating the Auto save function in the Options menu	25
6.3.2	Auto save function: Saving measured values	25
6.4	Viewing individual readings	26
6.5	Viewing individual readings from a series of measurements	27
6.6	Deleting all measured values (data log)	27
6.7	Deleting individual measurement series	28
6.8	Deleting individual values from a single series of measurements	29
7.	Product types	30
7.1	Definition product types	30
7.2	Definition water activity	31
7.3	Application range	33
8.	Using the LogMemorizer program	34
8.1	Installing/opening the program	34
8.2	Exporting measured values to a computer	34
9.	Checking the device's status	37

10.	Configuring the device	38
10.1	Turning on Bluetooth	38
10.2	Adjusting the date/time	38
10.3	Setting the emission ratio	39
10.4	Selecting a language	39
10.5	Activating options	40
10.6	Deactivating options	40
10.7	Selecting °C/°F	41
10.8	Reducing the device's power consumption	41
10.8.1	Configuring the display illumination time	41
10.8.2	Configuring automatic switch-off	42
10.9	Calibrating the device	42
10.10	Configuring the material calibration function	42
10.11	Online Send	42
10.12	Changing the password	43
10.13	Resetting the device to its factory settings	44
11.	Cleaning and maintenance	45
11.1	Changing the batteries	45
11.2	Care instructions	45
11.3	Cleaning the device	45
12.	2-point (optionally 3-point) calibration	46
12.1	Preparing the water activity measuring chamber	46
12.2	Determining the deviation	47
12.3	Performing a recalibration	48
12.3.1	Determination of calibration values	48
12.3.2	Entering the calculated calibration values into the RH2	49
13.	Faults	51
14.	Storage and disposal	52
14.1	Storing the device	52

14.2	Disposing of the device	52
15.	Device information	53
15.1	EC declaration of conformity	53
15.2	Technical data	54

1. Introduction

1.1 Information about this operating manual

This operating manual is designed to enable you to use the humimeter RH2 safely and effectively. It is part of the device, has to be stored nearby and must be easily accessible to users at all times.

All users are required to carefully read and make sure that they have understood this operating manual before using the humimeter RH2. All of the safety and operating instructions detailed in this manual have to be observed to ensure the safety of the device.

1.2 Limitation of liability

All of the information and instructions provided in this operating manual have been compiled on the basis of the current standards and regulations, the state of the art, and the extensive expertise and experience of Schaller GmbH.

Schaller GmbH does not accept any liability for damage associated with the following, which also voids the warranty:

- Non-observance of this operating manual
- Improper use
- Inadequately qualified users
- Unauthorised modifications
- Technical changes
- Use of unapproved spare parts

This fast measuring procedure can be affected by a range of different factors.

We, as the manufacturer, do not accept any liability for any incorrect measurements and associated consequential damage.

1.3 Symbols used in this manual

All of the safety information provided in this manual is shown with a corresponding symbol.



ATTENTION

It is essential to observe this warning. Non-compliance can lead to damage to property or equipment.



Information

This symbol indicates important information that enables users to use the device more efficiently and cost-effectively.

1.4 Customer service

For technical advice, please contact our customer service department at:

Klipspringer Ltd
Rynor House
Farthing Road
Ipswich
IP1 5AP



Telephone: 0044 (0) 1473 461800

Email: service@klipspringer.com

Website: www.klipspringer.com

2. For your safety

The device complies with the following European directives:

- Restriction of Hazardous Substances in Electrical and Electronic Equipment (RoHS)
- Electromagnetic compatibility (EMC)

The device corresponds to state-of-the-art technology. However, it is still associated with a number of residual hazards.

These hazards can be avoided through strict observance of our safety information.

2.1 Proper use

- Easy to use device for quickly measuring the water activity of food
- Easy to use device for climate and environmental applications

2.2 Improper use

- The device must not be used in ATEX.
- The device is not waterproof and must be protected from water and fine dust.

2.3 User qualifications

The device must only be operated by people who can be expected to reliably take the measurements. The device must not be operated by people whose reaction times may be slowed due to, e.g. the use of drugs, alcohol or medication.

All persons using this device must have read, understood and follow the instructions provided in the operating manual.

2.4 General safety information

The following safety information has to be observed at all times to avoid damage to objects and injury to people:

- Remove the batteries if the device is not used for a prolonged period of time (4 weeks).
- In case of damages or loose parts on the device, remove the batteries and contact Schaller GmbH or your dealer

All of the device's technical features have been inspected and tested before delivery. Every device has a serial number. Do not remove the tag with the serial number.

2.5 Warranty

The warranty does not apply to:

- Damage resulting from non-observance of the operating manual
- Damage resulting from third-party interventions
- Products that have been used improperly or modified without authorisation
- Products with missing or damaged warranty seals
- Damage resulting from force majeure, natural disasters, etc.
- Damage from improper cleaning
- Damage due to leaking batteries

3. On receipt of your device

3.1 Taking the device out of its packaging

- Take the device out of its packaging.
- Next, make sure that it is not damaged and that no parts are missing.

3.2 Making sure that all of the components have been included

Make sure that all of the components have been included by checking the package contents against the following list:

3.2.1 Scope of supply


- humimeter RH2
- Water activity measuring chamber
- 4 pieces of twist-off lids
- 2 pieces of screw-top jars 186ml
- 2 pieces of screw-top jars 245ml
- Calibration ampoules (art.no. 10005)
- 4 pieces of AA Alkaline batteries
- Rubber protection cover
- Plastic case
- Operating manual

Optional accessories:

- Replacement set with 14 pieces of screw-top jars 168ml with twist-off lid
- Replacement set with 14 pieces of screw-top jars 245ml with twist-off lid
- 14 pieces of plastic containers 200ml (PET) with twist-off lid
- Calibration ampoules - for checking the calibration of the humimeter RHx series
- humimeter USB data interface module - USB flash drive with software and USB cable
- Battery operated portable thermal printer (only possible together with humimeter USB data interface module) - Described in a separate operating manual
- Bluetooth module - Described in a separate operating manual
- Wall holder, mounted on humimeter RH2


3.3 Inserting batteries

1. Remove the rubber protection cover. To do so, hold the rubber protection cover at the upper side and pull it over (figure 1 and 2). In case of a sensor being connected, disconnect it beforehand and if your device is provided with an optional USB port, remove the protection cap of the USB socket beforehand too.
2. Take hold of the device with one hand, press your thumb onto the engraved area of the battery compartment (1) and drag downwards (2) (figure 3).
3. Insert the batteries with negative and positive terminals matching those indicated on the battery compartment. Press down the batteries so that they lay flat on the bottom of the housing (figure 4).
 - » As soon as all batteries have been inserted, the device switches on automatically.
4. Push the battery cover onto the housing until it clicks into place (figure 5). Then mount the rubber protection cover onto the housing, beginning at the end where the battery compartment is situated.

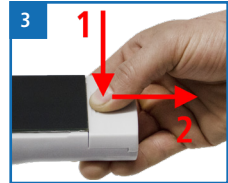

4. Using the device - Basics






4.1 Switching on the device


- Press the  button for 3 seconds.
- » The display will then show the status indicator (figure "9. Checking the device's status").
- » After inserting the batteries, the device switches on automatically.

4.2 Selecting the product type

To do so: The device has to be in the product selection menu.


For an overview of the different product types and the criteria for selecting them, please refer to "7. Product types".

1. Press the  or  button to move from one product to the next Or
2. Press the  or  button for 2 seconds to open the product type overview (figure 6).
3. Use the arrow keys to move from one product type to the next
4. and keep any of them pressed to scroll through the types.
5. Confirm your selection by pressing .
 - » The product type you selected will now be shown at the top of the display.

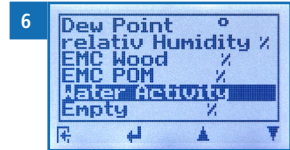

4.3 Exchanging the sensors

- If a sensor is already connected, unscrew it counterclockwise.
- Then plug the desired sensor into the device until both threads make contact.
 - » Pay attention to the elevation in the connector and its correct positioning (figure 8).
 - » Do not use excessive force to plug in the sensor, which is very easy to operate.
- Now tighten the thread.

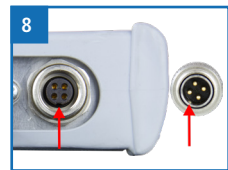


4.4 Taking a measurement

- For information on how to take a measurement, see section "5. The measuring process".

4.5 Switching the device off



To do so: The device has to be in the product selection or Data Log menu. It is not possible to switch off the device when it is in the main menu.

- Press the  button for 2 seconds.

5. The measuring process

5.1 Preparing a measurement

To do so: The device has to have nearly the same temperature than the product being measured. It is recommended to let your humimeter device adjust to the surrounding temperature for at least 30 minutes before the measurement.

- Switch on the device (see "4.1 Switching on the device").
- Connect the desired sensor to the device (see "4.3 Exchanging the sensors").
- » If no sensor is connected, the display will show **No Sensor** (figure 9).
- Select the desired product type (see "7. Product types") by pressing  or  (see "4.2 Selecting the product type").



5.2 Taking a measurement

To do so: Let the device adjust to the surrounding temperature for at least 30 minutes (see "5.3 Adjustment behaviour of the sensor").

- Fill the screw-top jar to at least two thirds with material (figure 10).
- » In case of coarse material the screw-top jar should be filled at least half-way. The higher the filling quantity, the quicker the adjustment.
- » If the filling quantity is too low, this can lead to deviations in the measurement result.
- » The material in the screw-top jar must not come into contact with the metal protective grid! The material must not enter the inside of the protective grid!
- Close the water activity measuring chamber tightly (figure 11).
- » Let the water activity measuring chamber and the material adjust until the displayed measuring value does not change any more over a longer period.
- » In case of unpeeled materials such as nuts, the adjustment time may be longer, as it may take longer until the material releases moisture in its surroundings for the measurement.



- » The adjustment time is extended when the device is switched off, as the water activity measuring chamber is equipped with a fan to accelerate the adjustment period (figure 12).
- Now take the measured values shown on the display of the device (figure 13).
- » Once the reading has been taken, it can be saved on the device (see "6.2 Saving your readings manually" or "6.3 Auto save function (time-based)").



ATTENTION

Pollution of the sensor with material

If the screw-top jar is filled too high, the sensor can become polluted, which leads to incorrect measurements.

- Make sure that the metal protective grid does not come into contact with the material being measured.



ATTENTION

Pollution of or damage to the sensor

By tilting or turning over the filled water activity measuring chamber, the sensor can become polluted or damaged, which leads to incorrect measurements.

- Make sure to only lift the water activity measuring chamber straight up into the air.



Information - Measuring accuracy

This rapid and non-destructive measuring procedure allows you to take multiple moisture readings of the same sample material. When saving the individual readings, the device will automatically calculate the readings' average (see "6.2.2 Saving several readings (a measurement series) at the same time").




Information - Incorrect readings

Always make sure to select the correct product type for the material you are measuring. This prevents taking incorrect readings (see "13. Faults").

5.3 Adjustment behaviour of the sensor

In humidity and temperature measurement, several parameters are responsible for the adjustment behaviour (time until the actual measuring value is displayed). The parameter responsible for the highest measuring error is a temperature discrepancy between the sensor resp. the whole measuring instrument and the material being measured resp. the air.

Therefore, allow your humimeter device to adjust until the displayed temperature corresponds to the actual temperature. The graph below shows how long it takes to adjust from 20 °C to 30 °C.

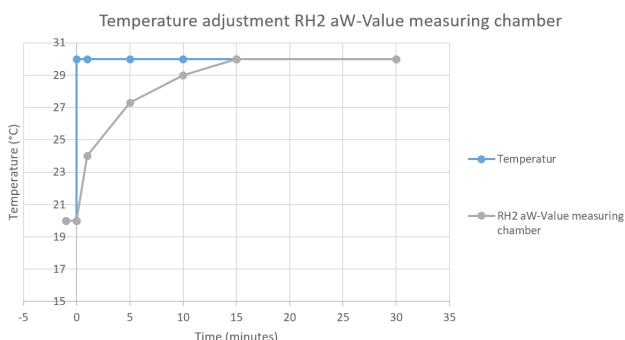

To demonstrate the importance of temperature adjustment, the table below shows the measuring errors due to a temperature difference between the measuring instrument and the material being measured of only 1 °C / 1.8 °F, at different ambient temperatures.

	10 °C (50 °F)	20 °C (68 °F)	30 °C (86 °F)
0.1 aw	+/- 0.007 aw	+/- 0.006 aw	+/- 0.006 aw
0.5 aw	+/- 0.035 aw	+/- 0.032 aw	+/- 0.03 aw
0.9 aw	+/- 0.063 aw	+/- 0.057 aw	+/- 0.054 aw

At room temperature (20 °C / 68 °F) and an assumed water activity of 0.5, a temperature difference between the sensor and the material being measured of 1 °C / 1.8 °F causes a measurement error of 0.032 aw. A temperature difference of 3 °C / 5.4 °F would cause a measurement error of more than 0.1 aw.













6. Saving your readings



6.1 Hold function - Freezing the displayed values

The device can be configured in such a way that the information being shown on the display will freeze at the touch of a button until a new button is pressed. This function can be used if you want the measuring value to remain on the display.

6.1.1 Activating the Hold function in the Options menu



To do so: The device has to be switched on and be in the product selection menu.

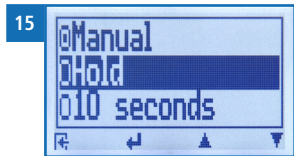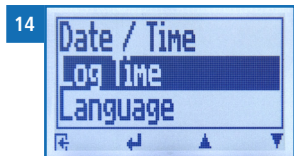
1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Log Time** (figure 14). To do so, press  or  and confirm by pressing .
4. Select **Hold** (figure 15). To do so, press  or  and confirm by pressing .
 - » The setting has been saved.
5. Press  to leave the **Options** menu.
6. Press  to leave the main menu.



6.1.2 Using the Hold function


To do so: The device has to be switched on and be in the Data Log menu.

- Press .
- » The current reading will be frozen. All of the four symbols will now be displayed as  (figure 16).
- To reactivate the frozen display, simply press any button.

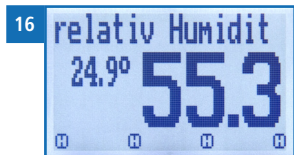

6.2 Saving your readings manually

All of the readings can be saved, edited and viewed on the device. The figure below shows the overview screen of a single saved series of measurements.

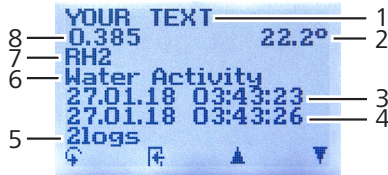

No.	Name
1	Name of the measurement series (editable)
2	Temperature (average)
3	Date & start time of the measurement series
4	Date & end time of the measurement series
5	Number of saved readings
6	Product type
7	Device name
8	Water activity (average)


6.2.1 Saving individual readings



The device can be configured in such a way that the device will save a reading every time a button is pressed. This option (manual save function) is the device's default setting.

Activating the manual save function in the Options menu

To do so: The device has to be switched on and be in the product selection menu.

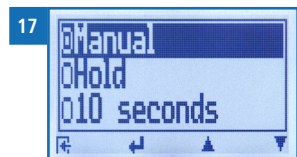









1. Press twice or hold for 2 seconds.
2. Select **Options**. To do so, press or and confirm by pressing .
3. Select **Log Time**. To do so, press or and confirm by pressing .
4. Select **Manual** (figure 17). To do so, press or and confirm by pressing .





- » The setting has been saved.
5. Press  to leave the **Options** menu.
 6. Press  to leave the main menu.

Using the manual save function

To do so: The device has to be in the Data Log menu (see "Data Log menu" page 6).


1. Press .
 - » The display will now appear as shown in figure 18 and the measured value will be preceded by the digit one.
2. Press  to enter a name for the saved reading and to finish the measuring process.
 - » The display will now appear as shown in figure 19.
3. The data you have inputted can be overwritten at any time.
4. **Inputting letters:**
Press and hold  to quickly scroll to the required letter and either press it for 3 seconds or press  to confirm the selected letter (figure 20).
5. **Inputting numbers:**
Press and hold  to quickly scroll to the required number and either press it for 3 seconds or press  to confirm the selected number.
6. **Moving forward/back:**
Press  to switch to another input level. Press  or  to move forward or back.
7. Confirm your entry by pressing .
 - » The data you entered has been saved.

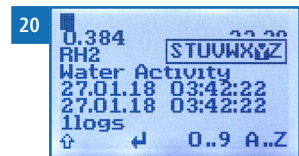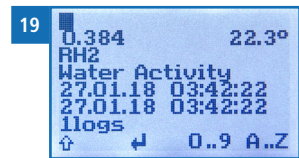


6.2.2 Saving several readings (a measurement series) at the same time


To do so: The device has to be in the Data Log menu (see "Data Log menu" page 6).

1. Take several readings (see "5. The measuring process").

2. To save a reading, press  as soon as the reading has been taken.


» The display will now appear as shown in figure 21. The marked number shows the number of readings that have already been saved.

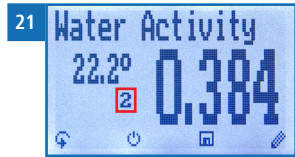



3. Press  to enter a name for the saved reading and to finish the measuring process.


» The display will now appear as shown in figure 22.

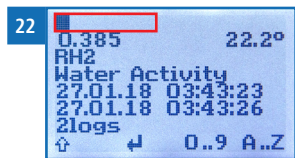4. The data you have inputted can be overwritten at any time.





5. **Inputting letters:**

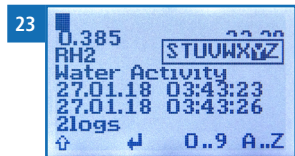
Press and hold  to quickly scroll to the required letter and either press it for 3 seconds or press  to confirm the selected letter (figure 23).




6. **Inputting numbers:**


Press and hold  to quickly scroll to the required number and either press it for 3 seconds or press  to confirm the selected number.

7. **Moving forward/back:**

Press  to switch to another input level.

Press  or  to move forward or back.

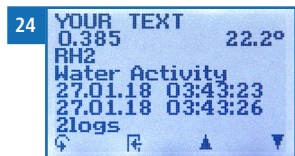

8. Confirm your entry by pressing .











» The data you entered has been saved.



6.3 Auto save function (time-based)

The device can be configured in such a way that it will automatically save a reading (log) at a selected time interval.



6.3.1 Activating the Auto save function in the Options menu

To do so: The device has to be switched on and be in the product selection menu.

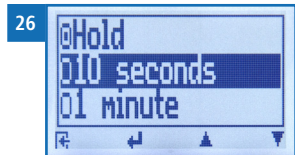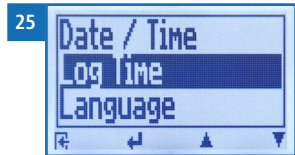1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Log Time** (figure 25). To do so, press  or  and confirm by pressing .
4. Navigate to the desired time interval (figure 26). To do so, press  or  and confirm by pressing .






» The setting has been saved.







5. Press  to leave the **Options** menu.
6. Press  to leave the main menu.

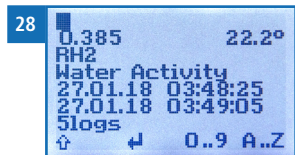6.3.2 Auto save function: Saving measured values

To do so: The device has to be in the Data Log menu (see "Data Log menu" page 6).





1. Press .
 - » The device will save a reading at the selected time interval. The number of data saves will increase by one every time a reading is saved. The display will now appear as shown in figure 27.
2. Press  to finish the measuring process and to enter a name for the saved readings.
 - » The display will now appear as shown in figure 28.
3. The data you have inputted can be overwritten at any time.





4. **Inputting letters:**
Press and hold **A..Z** to quickly scroll to the required letter and either press it for 3 seconds or press  to confirm the selected letter.
5. **Inputting numbers:**
Press and hold **0..9** to quickly scroll to the required number and either press it for 3 seconds or press  to confirm the selected number.
6. **Moving forward/back:**
Press  to switch to another input level. Press  or  to move forward or back.
7. Confirm your entry by pressing .
 - » The data you entered has been saved.

6.4 Viewing individual readings





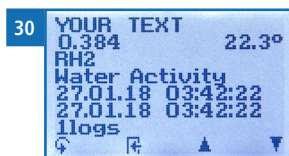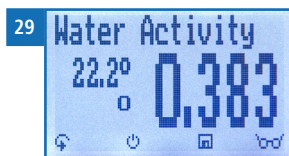


To do so: You must have saved a reading (e.g. **1 log**). The display will now appear as shown in figure 29.




1. Press .
2. Select the required reading. To do so, press  or .
 - » The display will now appear as shown in figure 30
 - » Press  to leave this screen.



6.5 Viewing individual readings from a series of measurements





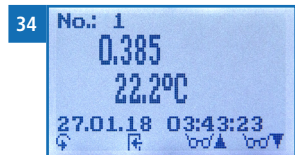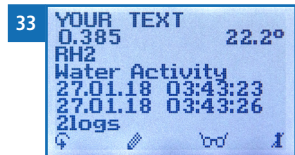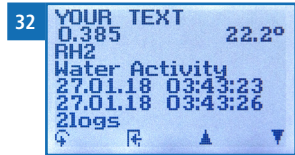



To do so: You must have saved a series of measurements (e.g. **2 logs**). The display will now appear as shown in figure 31.



1. Press .
2. Navigate to the required measurement series. To do so, press  or .
 - » The display will now appear as shown in figure 32.
3. Press  to switch to another input level.
 - » The display will now appear as shown in figure 33.
4. Press  again.
 - » The display will now appear as shown in figure 34.
5. Navigate to the required reading (**No.: 1, No.: 2, No.: 3**). To do so, press .
6. Press  to leave this screen.





6.6 Deleting all measured values (data log)

To do so: You must have taken and saved one or several readings.

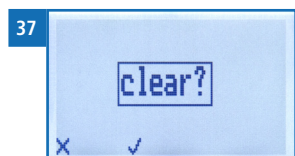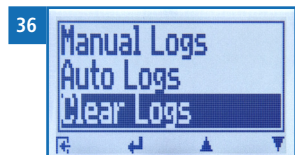





1. Press  twice or hold for 2 seconds.
2. Select **Edit Logs** (figure 35). To do so, press  or  and confirm by pressing .
3. Select **Clear Logs** (figure 36). To do so, press  or  and confirm by pressing .
4. The display will then show the message **clear?** (figure 37).
5. Confirm by pressing .
 - » The data log has been deleted.







6. Press  to leave the **Edit Logs** menu.
7. Press  to leave the main menu.

6.7 Deleting individual measurement series



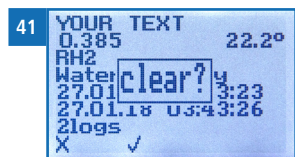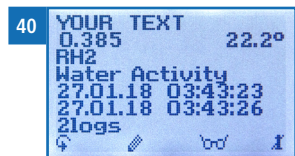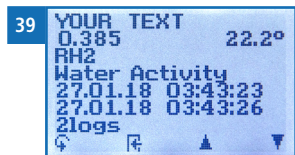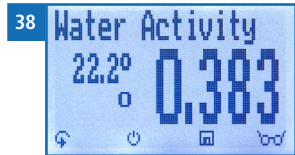







To do so: You must have saved a measured value (e.g. **1 log**) or a series of measurements (e.g. **3 logs**). The display will now appear as shown in figure 39.






1. Press .
2. Select the required reading. To do so, press  or .
 - » The display will now appear as shown in figure 39.
3. Press  to switch to another input level.
 - » The display will now appear as shown in figure 40.
4. Press .
 - » The display will then show the message **clear?** (figure 41).
5. Confirm by pressing .
 - » The value has been deleted.



6.8 Deleting individual values from a single series of measurements

To do so: You must have saved a series of measurements comprising at least 2 logs. The display will now appear as shown in figure 42.

1. Press .
2. Select the required reading. To do so, press  or .
- » The display will now appear as shown in figure 43.
3. Press  to switch to another input level.
- » The display will now appear as shown in figure 44.
4. Press .
5. The display will now appear as shown in figure 45.
6. Select the required measured value. To do so, press  or .
7. Press  to switch to another input level.
- » The display will now appear as shown in figure 46.
8. Press  to delete the value shown.
- » The display will then show the message **clear?** (figure 47).
9. Confirm by pressing .
- » The value has been deleted.
- » Deleted measuring values will be transferred to the LogMemorizer (see "8. Using the LogMemorizer program") and have to be deleted separately there.

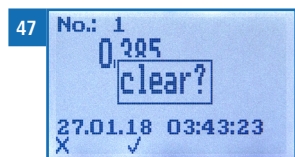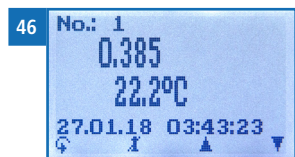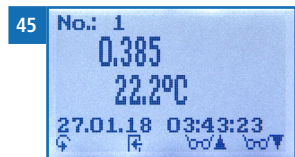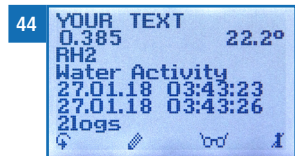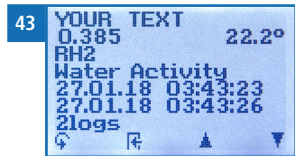

7. Product types

Product type	Definition	Unit	Measuring range
absolute Hu- midity	absolute air humidity	g/m ³	0 to 130 g/m ³
Dew Point	Dew Point	°C °F	-55 °C to +60 °C -67 °F to 140 °F
relativ Humidity	relative air humidity	% RH	0 to 100 %
EMC Wood	Wood equilibrium moisture content	% EMC.	2 to 30 % (wood moisture)
EMC POM	POM equilibrium moisture content	% EMC.	0 to 2 %
Water Activity	water activity	aw	0 to 1
Empty 1 - 5	Free curve for special products		

7.1 Definition product types

Absolute humidity

The absolute air humidity shows the contained amount of water in gramme per cubic metre of air. The absolute humidity is a direct degree for the amount of water vapour contained in a certain air volume. It shows how much condensate can precipitate or how much water has to be evaporated in order to obtain the desired humidity.

Dew Point

The dew point is the temperature to which the air that is not completely saturated with water vapour must be cooled so that it is completely saturated. When a room with the current relative humidity cools down to the dew point temperature, the water vapour begins to condense.

Relative humidity

Indicates the relationship between the current water vapour pressure and the maximum possible, the so-called saturation vapour pressure.

The relative humidity shows the degree the air is saturated with water vapour.
Examples:

50% relative humidity: At the current temperature and pressure, the air is half saturated with water vapour. 100% relative humidity means that the air is totally saturated with water vapour. If the air has more than 100% humidity, the excessive humidity would condense or precipitate as mist.

EMC wood

Shows the wood equilibrium moisture content (for wood stored under these conditions) in % wood moisture and the temperature in the selected unit (°C or °F).

EMC POM

Shows the POM granulate equilibrium moisture content (for granulate stored under these conditions) in % moisture content and the temperature in the selected unit (°C or °F).

Water activity

Water activity is also described as free, non-cellularly bound water in products such as food. The water activity is described in chapter "[7.2 Definition water activity](#)".

Free calibration curves

There are free calibration curves in the measuring device. These can be used for special products.

On request Schaller GmbH can develop customer-specific calibration curves for your product.

7.2 Definition water activity

Water activity is the ratio of the partial water vapour pressure in food (p) to the saturation vapour pressure of pure water (p_0). It is an important indicator for the product quality in the food, tobacco and pharmaceutical industry and is represented in an a_w value from 0 to 1.

The water activity is synonymous with the equilibrium moisture content – the relative humidity at which the material to be measured is in equilibrium with the ambient air. The relative humidity of air however is expressed in %.

The water activity is temperature-dependent. For the determination of the water activity at a desired temperature, the measuring device and the material being measured should be stored at the same temperature before starting the measurement.

The humimeter RH2 water activity measuring chamber is suited for the measurement of materials such as cereal products, coffee, cocoa, muesli, butter, mixtures of dried fruit, spices, granulates, mushrooms, sugar, xylitol, biscuits or dried sausage as well as many other types of food where a check of the water activity is necessary.

The humimeter RH2 water activity measuring chamber is generally not suited for liquids as well as juices (syrup), acidic food such as onions, fruits and tropical fruits or food and beverages containing alcohol, such as filled chocolates. Vinegar and acids destroy the calibration and the sensor.

Materials with a moisture content above the fibre saturation point, this means an aw value above 1, cannot be measured. For such materials only the water content can be determined.

The water activity must not be confused with the water content – the percentage of water contained in a product.

The water content is used for billing according to the dry content of food and materials, it shows the ratio of water to the total mass in percent (kg/kg)x 100.

The water activity influences the following characteristics of a product:


- microbiological stability
- chemical stability
- enzymatic stability
- colour, taste and nutritional value
- content of proteins and vitamins
- stability of composition
- shelf life
- storage and packaging

All forms of life are dependent on water. The water activity indicates the amount of water available for micro-organisms such as bacteria, fungi, moulds, etc. Each type of microorganism needs a certain minimum water activity value for being able to grow.

Typical minimum water activity values taken from literature:


Water activity	Organism
aw = 0.91 - 0.95	Bacteria
aw = 0.88	Yeast
aw = 0.80	Mould
aw = 0.75	Halophilic bacteria
aw = 0.70	Osmiophilic yeast
aw = 0.65	Xerophilic mould

Typical sorption isotherms of various foods and materials taken from literature:

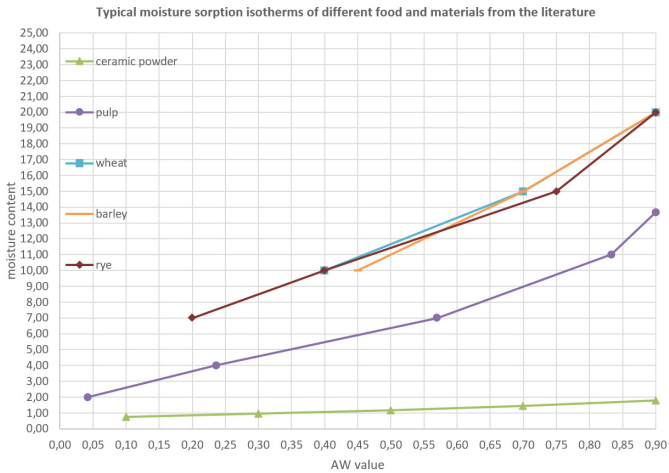





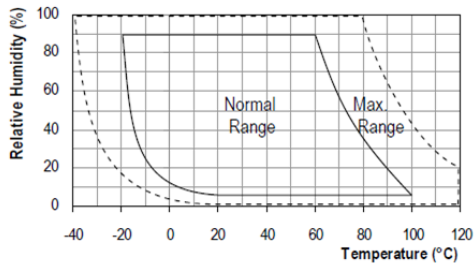


7.3 Application range



Within the normal application range (normal range) the accuracy of the device is as indicated. A long-term application beyond the normal application range (max. range), particularly at an air humidity of more than 80%, can lead to higher measuring errors (+3 % after 60 hours). Back in the normal application range, the sensor will return to the indicated accuracy automatically.



Exporting moisture readings from the humimeter RH2

Connect the humimeter RH2 to your computer using the supplied USB cable.


1. Insert the USB Mini B connector into the humimeter RH2 (figure 49).
2. Insert the USB connector into the computer.
3. Open LogMemorizer on your computer.
4. Switch on the humimeter RH2.
5. Press  twice or hold for 2 seconds.
6. Select **Send Logs** (figure 50). To do so, press  or  and confirm by pressing .
7. Select **Manual Logs** or **Auto Logs** (figure 51). To do so, press  or  and confirm by pressing .
8. The display will then show the message **Send** (figure 52).
 - » All of the measuring values saved on the humimeter RH2 will now be sent to your computer.

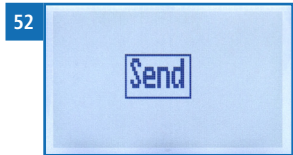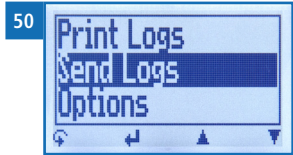


Initiating the data export at your computer

Connect the humimeter RH2 to your computer using the supplied USB cable.

1. Insert the USB Mini B connector into the humimeter RH2 (figure 53).
2. Insert the USB connector into the computer.
3. Open LogMemorizer on your computer.
4. Switch on the humimeter RH2.
5. Open the **Communication** tab in LogMemorizer (figure 54).

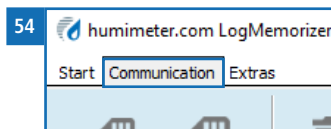



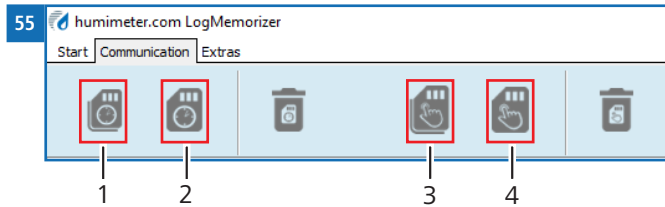

6. Select and click on one of the buttons shown in figure 55:
- » **Import all auto save logs** (for importing all automatically saved readings)
 - » **Import most recent auto save series** (for importing the most recent automatically saved logs)
 - » **Import all manual logs** (for importing all manually saved readings)
 - » **Import most recent manual log** (for importing the most recent manually saved log).




No.	Name
1	Import all auto save logs
2	Import most recent auto save series
3	Import all manual logs
4	Import most recent manual log



- » The measuring values saved on the humimeter RH2 will now be sent to your computer.

9. Checking the device's status

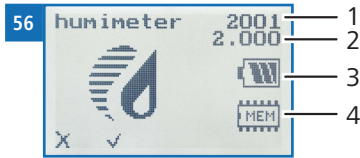1. Press  twice or hold for 2 seconds.
2. Select **Status**. To do so, press  or  and confirm by pressing .
 - » The display will then show the status indicator **humimeter**.
 - » The display will show the following information (figure 56):



No.	Name
1	Serial number
2	Software version
3	Battery status
4	Memory status
















3. Confirm by pressing .
4. Press  to leave the main menu.



10. Configuring the device

10.1 Turning on Bluetooth







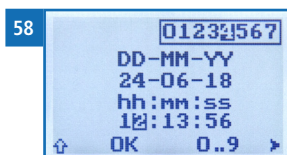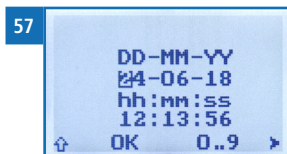

The information on Bluetooth is provided in a separate operating manual.

10.2 Adjusting the date/time


1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Date/Time**. To do so, press  or  and confirm by pressing .
4. The display will now appear as shown in figure 57.
 - » The format for the date is **DD-MM-YY** (Day-Month-Year).
 - » The format for the time is **hh:mm:ss** (hour:minutes:seconds).
5. **Inputting numbers:**
Press and hold  to quickly scroll to the required number and either press it for 3 seconds or press  to confirm the selected number (figure 58).
6. **Moving forward:**
To move forward between **DD-MM-YY** and **hh:mm:ss**, press .
7. **Moving back:**
Press  to switch to another input level. To move backward between **DD-MM-YY** and **hh:mm:ss**, press .
8. Confirm the date/time by pressing .
 - » The settings have been saved.
9. Press  to leave the **Options** menu.
10. Press  to leave the main menu.







10.3 Setting the emission ratio

1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Emission ratio**. To do so, press  or  and confirm by pressing .
4. Overwrite the current emission ratio. To do so, press and hold **0..9** to quickly scroll to the required number and either press it for 3 seconds or press  to confirm the selected number.













Moving back:

Press  to switch to another input level.

To move back, press .















5. Confirm the new emission ratio by pressing .
- » The setting has been saved.
6. Press  to leave the **Options** menu.
7. Press  to leave the main menu.



10.4 Selecting a language

1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Language**. To do so, press  or  and confirm by pressing .
4. Navigate to the required language. To do so, press  or  and confirm by pressing .
- » The setting has been saved.
5. Press  to leave the **Options** menu.
6. Press  to leave the main menu.

10.5 Activating options

To do so: Some of the options must be deactivated.

1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Unlock**. To do so, press  or  and confirm by pressing .
 - » The display will now appear as shown in figure 59.
 - » On delivery, the four-digit password is the device's serial number.
4. **Inputting numbers:**
Press and hold  to quickly scroll to the required number and either press it for 3 seconds or press  to confirm the selected number (figure 60).
5. **Moving back:**
Press  to switch to another input level.
To move back, press .
6. Confirm the four-digit password by pressing .
 - » The setting has been saved.
 - » The **°C/°F**, **BL On Time**, **Auto OFF Time**, **Calibrate**, **Materialcalib.**, **Online Send**, **Password**, **Reset** options are now activated.
7. Press  to leave the **Options** menu.
8. Press  to leave the main menu.

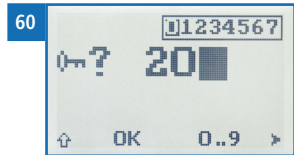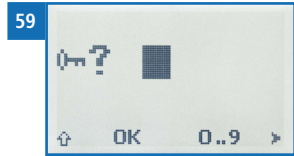













10.6 Deactivating options

Once the device has been switched restarted, the **°C/°F**, **BL On Time**, **Auto OFF Time**, **Calibrate**, **Materialcalib.**, **Online Send**, **Password**, **Reset** options will be deactivated again.

10.7 Selecting °C/°F













To do so: All of the options must be activated (see "10.5 Activating options").

1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **°C/°F**. To do so, press  or  and confirm by pressing .
4. Navigate to the required temperature scale, i.e. Celsius (°C) or Fahrenheit (°F). To do so, press  or  and confirm by pressing .
- » The setting has been saved.
5. Press  to leave the **Options** menu.
6. Press  to leave the main menu.

10.8 Reducing the device's power consumption













10.8.1 Configuring the display illumination time

To do so: All of the options must be activated (see "10.5 Activating options").

1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **BL On Time**. To do so, press  or  and confirm by pressing .
4. Select the required display illumination period (30 seconds, 2 minutes, 5 minutes, 10 minutes). To do so, press  or  and confirm by pressing .
- » The setting has been saved.
5. Press  to leave the **Options** menu.
6. Press  to leave the main menu.

10.8.2 Configuring automatic switch-off

To do so: All of the options must be activated (see "10.5 Activating options").

1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Auto Off Time**. To do so, press  or  and confirm by pressing .
4. Select the period of time you want the device to stay switched on (3 minutes, 5 minutes, 10 minutes, 20 minutes, 30 minutes). To do so, press  or  and confirm by pressing .
- » The setting has been saved.
5. Press  to leave the **Options** menu.
6. Press  to leave the main menu.

10.9 Calibrating the device









For information on how to calibrate your device, see section "12. 2-point (optionally 3-point) calibration".


10.10 Configuring the material calibration function

The type calibration function is described in a separate operating manual.

10.11 Online Send









To do so: All of the options must be activated (see "10.5 Activating options").

1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Online Send**. To do so, press  or  and confirm by pressing .
- » The setting has been saved.
- » The device now automatically sends the stored measured value to the PC each time the memory button is pressed.
4. Press  to leave the **Options** menu.

-
5. Press  to leave the main menu.

10.12 Changing the password



To do so: All of the options must be activated (see "10.5 Activating options").

1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Password**. To do so, press  or  and confirm by pressing .
 - » The display will show the current password.
4. Overwrite the current password. To do so, press and hold **0..9** to quickly scroll to the required number and either press it for 3 seconds or press  to confirm the selected number.

Moving back:









Press  to switch to another input level.



To move back, press .

5. Confirm the new four-digit password by pressing **OK**.
 - » The setting has been saved.
6. Press  to leave the **Options** menu.
7. Press  to leave the main menu.

10.13 Resetting the device to its factory settings

To do so: All of the options must be activated (see "10.5 Activating options").

1. Press  twice or hold for 2 seconds.
2. Select **Options**. To do so, press  or  and confirm by pressing .
3. Select **Reset**. To do so, press  or  and confirm by pressing .
 - » The display will then show the message **Reset?** (figure 61).
4. Confirm by pressing .
 - » The device will now be reset to its factory settings. All of your personal settings will be lost.
 - » The display will show the status indicator **humimeter** (figure 62).
 - » Resetting the device will not affect the saved measuring values.

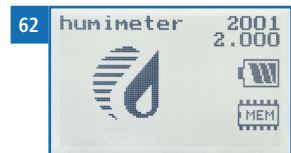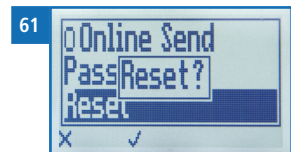

11. Cleaning and maintenance

Regularly cleaning and maintaining the device will ensure that it will have a long service life and stay in good condition.

11.1 Changing the batteries

The device constantly monitors the charge level of the batteries. The current battery status is shown on the status screen.

If the battery's charge is very low, the battery symbol will be shown with an exclamation mark. In that case, the batteries must be changed immediately (figure 63).

For changing the batteries, see section "3.3 Inserting batteries".

As the device's user, you are responsible by law for properly disposing of all used batteries, which must not be disposed of as domestic waste (Battery Directive).



11.2 Care instructions

- Do not leave the device out in the rain. The device is not waterproof.
- Do not immerse the sensor in water.
- Do not expose the device to extreme temperatures.
- Protect the device from strong mechanical shocks and loads.

11.3 Cleaning the device



ATTENTION

Do not clean with fluids

Water or cleaning fluid getting inside the device can destroy the device.

- ▶ Only clean with dry materials.

Plastic housing

Clean the plastic housing with a dry cloth.

Water activity measuring chamber

Clean the screw-top jar with a cloth and cleaning alcohol.

The sensor cannot be cleaned. In case of a polluted sensor please contact your dealer.

12. Checking the calibration

Requirement: Calibration ampoules (humidity standards art.no.10005). Use for the calibration one of the screw-top jars with a filling quantity of 186 ml. The device, the water activity measuring chamber and the humidity standards must have a temperature between 20.0 °C and 26.0 °C. It is recommended to store the device, the water activity measuring chamber and the calibration ampoules for 24 hours in a room with low temperature fluctuation.

Perform the calibration in the approximate application range.

Example: For measurements between 0.2 and 0.5 aw use the humidity standards 35 % and 50 % rh.

12.1 Preparing the water activity measuring chamber

1. Clean the screw-top jar thoroughly (see "11.3 Cleaning the device").
2. Place the textile pad into the screw-top jar (figure 65) and carefully pour the humidity standard onto the pad.
3. Hold the ampoule by the neck and release the entire liquid into the lower part of the ampoule by light tapping.
4. Now carefully break the head of the ampoule on the marked spot.
5. Pour the solution completely onto the textile pad in the glass. Tighten the aw-Value measuring chamber well.
 - » Recommendation: Keep the screw-top jar on the table while screwing.
 - » If necessary, only lift the water activity measuring chamber straight up, do not tilt or turn it over.
6. In case it has been lifted, carefully place the water activity measuring chamber onto an even table.
 - » Make sure to lift the water activity measuring chamber straight up and not to tilt or turn it over. Otherwise the sensor may be damaged.





CAUTION

Risk of injury

Lacerations caused by breaking the ampoules during removal.

- ▶ Remove the ampoules from the packaging by their base, as shown in picture 66.
- ▶ Avoid putting stress on the predetermined breaking point, as shown in picture 67.

66



67





ATTENTION

Damage to or destruction of the sensor

The sensor can be damaged by tilting or turning over the water activity measuring chamber with the textile pad inside.

- ▶ Make sure to only lift the water activity measuring chamber straight up into the air.

12.2 Determining the deviation

1. Let the sensor adjust to the humidity standard for at least 2 hours.
2. Switch on the device (see "4.1 Switching on the device") and select the product type "relativ Humidity" by pressing  or  (see "4.2 Selecting the product type").
3. Then note down the measured relative humidity and temperature.
4. At ideal temperature conditions (device, water activity measuring chamber and humidity standard have a temperature of 23 °C), the value printed on the humidity standard can be used as reference value.
5. In case of deviation from the factory temperature (23.0 °C), the real humidity value must first be determined according to the table below.

Temperature	Humidity standards		
	35 %	50 %	80 %
20 °C	34.8 %	49.8 %	79.8 %
21 °C	34.9 %	49.9 %	79.9 %
22 °C	34.9 %	50.0 %	79.9 %
23 °C	35.0 %	50.0 %	79.9 %
24 °C	35.1 %	50.1 %	80.0 %
25 °C	35.2 %	50.2 %	80.0 %
26 °C	35.3 %	50.2 %	80.0 %

6. Note down the real humidity value.
7. Compare the noted displayed measuring value with the real humidity value.
 - » If the indicated value shows a difference higher than 1.5 % relative humidity, it is recommended to perform a recalibration. A calibration can be performed by the company Schaller Messtechnik GmbH.
 - » It is also possible to run the calibration by yourself using the calibration ampoules: For instructions on how to perform calibration, please contact Schaller Messtechnik GmbH or your distributor.
8. Open the measuring chamber and clean the glass jar with plenty of water. The textile pad must be washed out well and can then be disposed.

13. Faults

If the measures listed below fail to remedy any faults or if the device has faults not listed here, please contact Schaller Messtechnik GmbH.

Fault	Cause	Remedy
Measuring error	The temperature is outside the operating temperature: lower than -10 °C or higher than +60 °C	Only use the device in temperatures between -10 °C and +60 °C.
	Measurement error due to too short temperature adjustment time	Let the device adjust to the surroundings (see "5.3 Adjustment behaviour of the sensor").

Fault	Cause	Remedy
	Wrong product type	Check whether you have selected the right product type before taking a reading (see "7. Product types").
	Filling volume too low	Fill the screw-top jar to at least two thirds with fine material or at least half-way with coarse material.
	Dripping water or sprayed water	Direct contact of the sensor with dripping or sprayed water will destroy it.
	Irreversible damage of the sensor due to aggressive gases	Please contact your dealer.
	Condensation caused by a change in temperature	Condensation on the sensor interferes with the calibration. Let the device adjust to the surrounding temperature.
	Polluted sensor	Please contact your dealer.
	Foreign particles on the sensor	Please contact your dealer.
Data transfer to Log-Memorizer failed	Interface has not been configured	The interface only has to be configured once. To do so, press the F1 key on your computer and read the Help file for your LogMemorizer program.

14. Storage and disposal

14.1 Storing the device

The device must be stored as follows:

- Do not store outdoors.
- Store in a dry and dust-free place.
- Protect the device from sunlight.
- Avoid mechanical shocks/loads.
- Remove the batteries if the device is not used for a period of 4 weeks or longer.
- Storage temperature: -20 °C to +60 °C

14.2 Disposing of the device



Devices marked with this symbol are subject to Directive 2012/19/ EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE).

If the device is being operated outside the European Union, the national regulations on the disposal of such devices that apply in the country of use must be observed.

Electronic devices must not be disposed of as domestic waste.

The device must be disposed of appropriately using appropriate collection systems.

15. Device information

15.1 EC declaration of conformity

CE KONFORMITÄTSERKLÄRUNG DECLARATION OF CONFORMITY

Name/ Adresse des Herstellers: **Schaller Messtechnik GmbH**

Name/ address of manufacturer: **Max-Schaller-Straße 99
A – 8181 St. Ruprecht**

Produktbezeichnung: **humimeter**

Product designation:

Typenbezeichnung: **RH1 ; RH2 ; RH2 AW ; RH5 ; RH5.1 ; RH5.2 ; RH6 ; RHL ;
SW1**

Type designation:

Produktbeschreibung: **Messgerät zur Bestimmung der rel.Feuchte und
abgeleiteter Messgrößen**

Product description **Measuring instrument for determining relative humidity
and derived measured variables**

Das bezeichnete Produkt erfüllt die Bestimmungen der Richtlinien:

The designated product is in conformity with the European directives:

EMV - Richtlinie 2014/30/EC

EMC Directive 2014/30/EU

RoHS - Richtlinie 2011/65/EG

RoHS-Directive 2011/65/EU

Die Übereinstimmung des bezeichneten Produktes mit den Bestimmungen der Richtlinien wird durch die vollständige Einhaltung folgender Normen nachgewiesen:

Full compliance with the standards listed below proves the conformity of the designated product with the provisions of the above-mentioned EC Directives:

EN 61326-1:2013

Elektrische Mess-, Steuer-, Regel- und Laborgeräte - EMV-Anforderungen
Electrical equipment for measurement, control, and laboratory use – EMC requirements

**EN IEC 63000:2019-05
ersetzt / replaced
EN 50581:2012**

Technische Dokumentation zur Beurteilung von Elektro- und Elektronikgeräten hinsichtlich der Beschränkung gefährlicher Stoffe.
Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.

Für das angeführte Produkt ist eine vollständige Dokumentation mit Betriebsanleitung in Originalfassung vorhanden.

For the mentioned product a complete documentation with manual of instruction in original version is available.

Bei Änderungen, die nicht vom Hersteller spezifiziert sind, verliert diese Konformitätserklärung die Gültigkeit.

In case of any changes not agreed upon with the manufacturer, this declaration of conformity loses its validity.

St. Ruprecht a.d. Raab, 31.07.2022



.....
Bernhard Maunz
Rechtsverbindliche Unterschrift des Ausstellers
Legal binding signature of the issuer

Name/ address of manufacturer: **Schaller Messtechnik GmbH
Max-Schaller-Straße 99
A – 8181 St. Ruprecht**

Product designation: **humimeter**

Type designation: **RH1 ; RH2 ; RH2 AW ; RH5 ; RH5.1 ; RH5.2 ; RH6 ; RHL ;
SW1**

Product description **Measuring instrument for determining relative humidity
and derived measured variables**

The designated product is in conformity with the following directives:

- **Electromagnetic Compatibility Regulations 2016 Great Britain**
- **RoHS-Directive 2011/65/EU Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment**

Full compliance with the standards listed below proves the conformity of the designated product with the provisions of the above-mentioned Directives:

EN 61326–1:2013	Electrical equipment for measurement, control, and laboratory use – EMC requirements
EN IEC 63000:2019-05 replaced EN 50581:2012	Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances.

For the mentioned product, a complete documentation with manual of instruction in original version is available.

In case of any changes not agreed upon with the manufacturer, this declaration of conformity loses its validity.

St. Ruprecht a.d. Raab, 31.07.2022



.....
Bernhard Maunz
Legal binding signature of the issuer

15.2 Technical data

Display resolution	0.1 g/m ³ absolute humidity, 0.1 % rel. air humidity, 0.1 °C / 0.3 °F dew point, 0.1 °C/ 0.3 °F temperature, 0.1 % EMC Wood, 0.01 % EMC POM, 0.001 aw
Measuring range rel. air humidity	0 % to 100 % RH
Calibration rel. air humidity	0 % to 90 % RH
Measuring range dew point	-55 °C to +60 °C
Measuring range EMC Wood	2 % to 30 %
Calibration EMC Wood	5 % to 15 %
Measuring range EMC POM	0 % to 2 %
Calibration EMC POM	0 % to 2 %
Measuring range Water Activity	0 to 1.00
Calibration Water activity	0 to 0.98
Accuracy rel. air humidity	+/- 1.5 % (at 25 °C)
Accuracy temperature	+/- 0.3 °C (at 25 °C) / +/- 0.5 °F (at 77 °F)
Accuracy EMC Wood	+/- 0.5 % (at 25°C)
Accuracy EMC POM	+/- 0.05 % (at 25°C)
Accuracy Water activity (at 25 °C)	+/- 0.01 from 0.10 to 0.80 +/- 0.04 from 0.00 to 0.10 & 0.80 to 0.98
Operating temperature	-10 °C to +60 °C
Storage temperature	-20 °C to +60 °C
Temperature compensation	Automatic
Data memory	Up to 10,000 measuring values
Power supply	4 pcs. of 1.5 Volt AA Alkaline batteries
Current consumption	60 mA (incl. display illumination)
Menu languages	German, English, French, Italian, Spanish, Portuguese, Czech, Polish, Russian, Interna- tional

Display	128 x 64 illuminated matrix display
Device dimensions	249 x 75 x 30 mm
Dimensions water activity measuring chamber	∅ 85 x 102 mm (186 ml) ∅ 85 x 111 mm (245 ml)
Device weight	210 g
Weight water activity measuring chamber	542 g (186 ml) 556 g (245 ml)
Device IP rating	IP 40



Climate
Environment



Materials



Food



Buildings



Bioenergy



Paper / Board